


## OPERATING INSTRUCTIONS FOR WET SPRINKLER CONTROL MODULE NO BACK FLOW OR CHECK VALVE

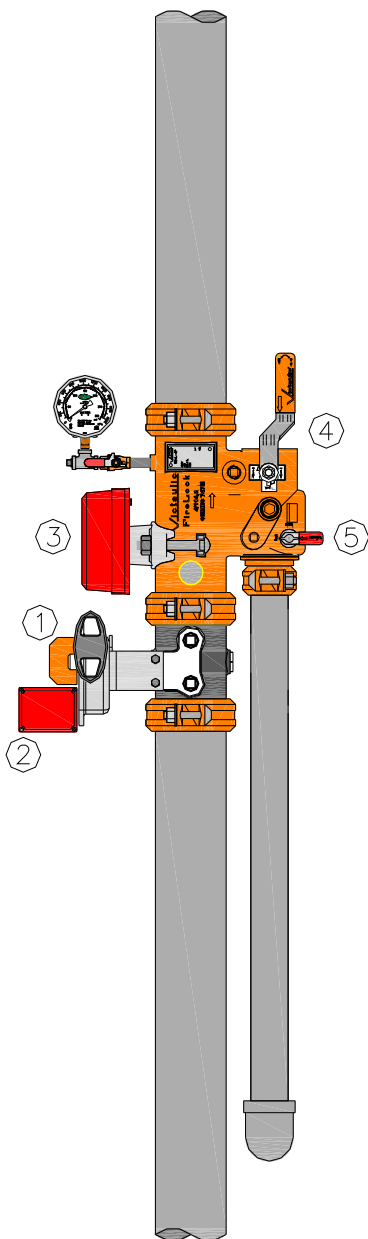

### COMPONENTS

1. MAIN CONTROL VALVE (NORMALLY OPEN)
2. VALVE SUPERVISION SWITCH (IF INSTALLED)
3. WATER FLOW SWITCH (MAY BE MULTIPLE LOCATIONS AS PER SPRINKLER SYSTEM ZONING)
4. TEST AND DRAIN VALVE (NORMALLY CLOSED)
5. TEST AND DRAIN SELECTOR

### INSTRUCTIONS FOR TESTING SYSTEM

- (A) NOTIFY FIRE DEPARTMENT, SECURITY COMPANY AND ALL FACILITY OCCUPANTS THAT A TEST IS GOING TO BE CONDUCTED
- (B) TO TEST WATER FLOW ALARM SWITCH, POSITION TEST AND DRAIN SELECTOR (5) TO TEST SETTING
- (C) OPEN TEST AND DRAIN VALVE (4) TO OPEN POSITION RETURN VALVE TO CLOSED POSITION
- (D) NOTIFY FIRE DEPARTMENT, SECURITY COMPANY AND ALL FACILITY OCCUPANTS THAT TESTING IS COMPLETE

### INSTRUCTIONS FOR DRAINING SYSTEM

- (A) NOTIFY FIRE DEPARTMENT, SECURITY COMPANY AND ALL FACILITY OCCUPANTS
- (B) SHUT OFF MAIN CONTROL VALVE (1)
- (C) POSITION TEST AND DRAIN SELECTOR (5) TO DRAIN POSITION
- (D) OPEN TEST AND DRAIN VALVE (4) TO OPEN POSITION RETURN VALVE TO CLOSED POSITION

### INSTRUCTIONS FOR RE-FILLING SYSTEM

- (A) CLOSE TEST AND DRAIN VALVE (4) TO CLOSED POSITION
- (B) OPEN MAIN CONTROL VALVE (1)
- (C) NOTIFY FIRE DEPARTMENT, SECURITY COMPANY AND ALL FACILITY OCCUPANTS THAT THE SYSTEM IS ON AND IN OPERATION

**FOR ANNUAL INSPECTIONS, RENOVATIONS AND  
24 HOUR EMERGENCY SERVICE CALL 519-823-1150**

[www.spira.ca](http://www.spira.ca)