


OPERATING INSTRUCTIONS FOR WET SPRINKLER CONTROL MODULE WITH BACKFLOW

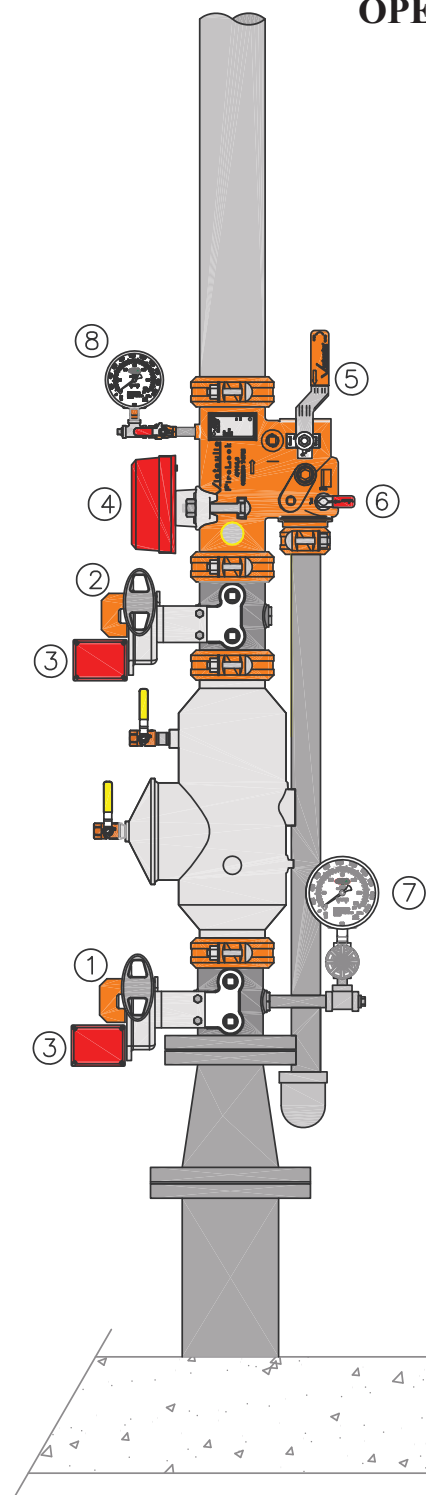

Components

1. #1 Main Control Valve (Normally Open)
2. #2 Main Control Valve (Normally Open)
3. Valve Supervision Switch
4. Water Flow Switch (May Be Multiple Locations As Per Sprinkler System Zoning)
5. Test & Drain Valve (Normally Closed)
6. Test or Drain Selector
7. Incoming Water Pressure Gauge
8. System Water Pressure Gauge

Instruction For Testing System

- (A) Notify Fire Department, Security Company and All Facility Occupants That A Test Is Going To Be Conducted
- (B) To Test Water Flow Alarm Switch, Position Test or Drain Selector (6) To Test Position
- (C) Open Test & Drain Valve (5) To Open Position Until Alarm is Activated. Return Valve To Closed Position
- (D) Notify Fire Department, Security Company and All Facility Occupants That Testing Is Complete

Instruction For Draining System

- (A) Notify Fire Department, Security Company and All Facility Occupants That System is Being Shut Down
- (B) Shut Off #1 and / or #2 Main Control Valve (s)
- (C) Position Test or Drain Selector (6) To Drain Position
- (D) Open Test & Drain Valve (5) To Open Position

Instruction For Re-Filling System

- (A) Close Test & Drain Valve (5) To Closed Position
- (B) Open #1 and / or #2 Main Control Valve (s)
- (C) Notify Fire Department, Security Company And All Facility Occupants That System Is On And In Operation